
### e-nedzi.com


# SSCMS Cross Recessed Truss Head Captive Screws

## SUS Stainless steel



Installation example

Make a screw hole in the cover, then pass **SSCMS** thread through it. Even when the screw is removed from the frame, **SSCMS** does not fall out from the cover because **SSCMS** thread catches on the screw hole of the cover.

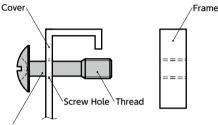

SSCMS Cross Recessed Truss Head Captive Screw



- The shape of the screws prevent them from falling out and loss. They are intended to fix protective and inspection covers that are frequently installed and removed.
- These screws have large heads that decorate attachment surfaces beautifully.
- These items comply with CE marking requirements.
- Application

Securement of protective and inspection covers and compliance with CE marked products

Machine tools, food industry machines, and electrical and electronic equipment

### Material/Finish

<ul> <li>Material/Finish</li> </ul>	🚺 Rohs
	SSCMS
Main Body	SUSXM7 (Equivalent to SUS304)
Strength Class	A2-50

Precautions for Use

• The inner diameter of the screw hole of the cover must be equal or larger than dimension dc.

Unit:mm

• The thickness of the cover must be 0.8 mm or more.

Part Number	M (Coarse)			L 💶											Cross-	
	Nominal of Thread	Pitch									Lm	D1	Lı	dc	recessed Socket Number	Mass (g)
SSCMS-M3	M3	0.5	8	10	12	16					4	6.9	1.9	2.2	1	0.61 - 0.94
SSCMS-M4	M4	0.7		10	12	16	20				5	9.4	2.5	3	2	1.4 - 2.2
SSCMS-M5	M5	0.8			12	16	20	25			6	11.8	3.1	3.9	2	3.1 - 4.7
SSCMS-M6	M6	1			12	16	20	25	30		8	14	3.7	4.6	3	4.4 - 7.5
SSCMS-M8	M8	1.25				16	20	25	30	40	10	17.8	4.8	6.3	3	10 - 18

#### • Part number specification



 Individual Sales 🕵 Cleanroom Wash & Packaging 🔐 Screw Length Adjustment 💶 Vibration Resistant 🛛 Modification process for captive use 1 piece in 1 pack Available / Add'l charge Not Available Not Available with Captive Processing

**N**NBK

▶ https://www.nbk1560.com